BL areaLINEAR LN1211



Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.


Local building and electrical codes should be consulted before installation.




ATTENTION

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

SURFACE MOUNT Mountable base with 180° Adjustable Bracket

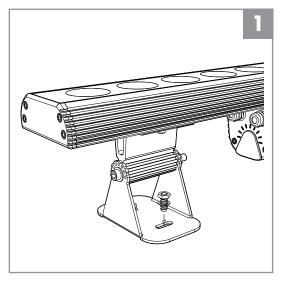

- 1.
- A. Position LN1211 at desired location of install.
- B. Fasten mounting bracket with bolts through mounting holes.

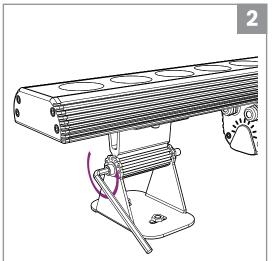

2.

for current technical data.

Loosen screws with Hex Key.

BL LIGHTING ILLUMINATE EVERYTHING

111 - 8838 Heather St. Vancouver, BC. Canada. V6P 3S8 P: 1-604-874-4405 E: info@bllighting.com Copyright © BL INNOVATIVE LIGHTING. All Rights Reserved.

Solid State Lighting is sensitive to power fluctuations. Surge protection is highly recommended for all LED lighting products and should be on a dedicated circuit to protect against prema-ture failure. Lack of surge protection may void your warranty. Designed & Assembled in North America.

bllighting.com




1





3.

Tilt LN1211 at desired angle.

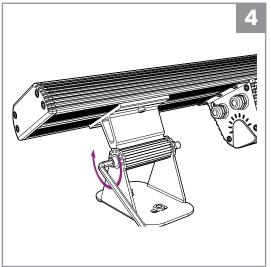

4.

Re-Tighten with Hex Key.

111 - 8838 Heather St. Vancouver, BC. Canada. V6P 3S8 P: 1-604-874-4405 E: info@bllighting.com Copyright © BL INNOVATIVE LIGHTING. All Rights Reserved. Solid State Lighting is sensitive to power fluctuations. Surge protection is highly recommended for all LED lighting products and should be on a dedicated circuit to protect against premature failure. Lack of surge protection may void your warranty. Designed & Assembled in North America.

bllighting.com

