

BL flexFORM B5

Universal Bend Flexible LED Optic Wall Grazer
Monochromatic, 24VDC, Constant Voltage

INSTALLATION INSTRUCTIONS



Please note that these instructions are guidelines only and in no way supersede any construction or installation standards. Local building and electrical codes should be consulted before installation.

ATTENTION

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.



A



 
B



C

IMPORTANT:

Do not exceed minimum bend diameter

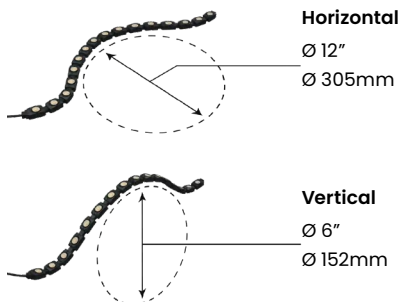

1. Ensure that all required parts such as clips, mounting brackets, drivers and luminaires are accounted for before installation. (A)
2. Bench test B5 with supplied drivers before installation to ensure that all luminaires and drivers function correctly.
3. Prepare installation area and ensure that it is clean of all debris and obstructions before proceeding with installation.
4. Mark desired locations of mounting clips with a pencil making sure that the surface is even/flat. Make sure not to exceed bending parameters found in the products specification sheet when marking locations.
5. Using the correct screws/fasteners for your mounting surface, carefully affix the clear plastic mounting clips on the pre-marked locations. Make sure not to over tighten the screws/fasteners as this may cause damage to the clips.
6. If using louvers, install the louvers on-to the strip by gently pressing them onto the fixture until they "click", if no louvers are used, skip to step 7. (B)
7. Making sure to orient the luminaire lead end in the desired location near the driver, carefully push the luminaire into the clips one at a time. If there is a misalignment of the luminaire and clip, do not force the luminaire in. Reposition the clip into the correct location and then push the luminaire into the clip. (C)
8. Once the luminaire has been mounted, using the provided wiring diagram, connect the luminaire and test functionality. If the luminaire fails to light, double check that all wiring connections are made correctly.

BL LIGHTING
ILLUMINATE EVERYTHING

111 - 8838 Heather St. Vancouver, BC, Canada. V6P 3S8
P: 1-804-874-4405 E: info@bllighting.com
Copyright © BL INNOVATIVE LIGHTING. All Rights Reserved.

Solid State Lighting is sensitive to power fluctuations. Surge protection is highly recommended for all LED lighting products and should be on a dedicated circuit to protect against premature failure. Lack of surge protection may void your warranty.

Designed & Assembled in North America.

Specifications subject to change without notice. Please refer to our website at bllighting.com for current technical data.

For more information, please download the BL LIGHTING catalog

bllighting.com



BL flexFORM B5

Universal Bend Flexible LED Optic Wall Grazer
Monochromatic, 24VDC, Constant Voltage

 
INSTALLATION INSTRUCTIONS



Please note that these instructions are guidelines only and in no way supersede any construction or installation standards. Local building and electrical codes should be consulted before installation.

ATTENTION


- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

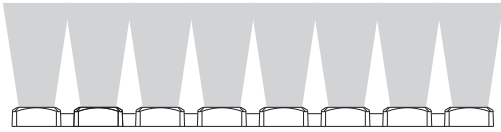

Note:

Where consistent wall wash and graze effects are desired, Mounting Channels are the preferred method of installation. When using Mounting Clips, it is recommended that BL flexFORM B5 be secured to a flat surface.

 Mounting BL flexFORM B5 on a curved surface may cause striations or gaps that can interrupt the wall wash and graze effects.

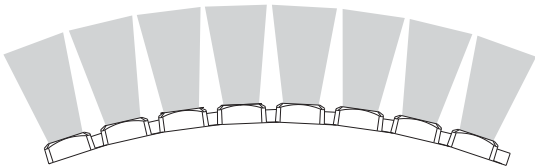

BL LIGHTING ILLUMINATE EVERYTHING

111 - 8838 Heather St. Vancouver, BC, Canada. V6P 3S8
P: 1-804-874-4405 E: info@bllighting.com
Copyright © BL INNOVATIVE LIGHTING. All Rights Reserved.

Solid State Lighting is sensitive to power fluctuations. Surge protection is highly recommended for all LED lighting products and should be on a dedicated circuit to protect against premature failure. Lack of surge protection may void your warranty.

Designed & Assembled in North America.

Specifications subject to change without notice. Please refer to our website at bllighting.com for current technical data.

For more information, please download the BL LIGHTING catalog

bllighting.com

