IRDR6 **BL Controls**






Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.

Local building and electrical codes should be consulted before installation.


ATTENTION

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

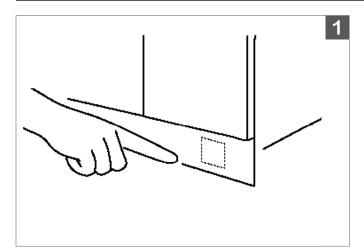


1. Determine the sensor installation location, ensure the desired trigger area is clearly marked.

NOTE: It is always good to verify the sensor triggers correctly in place before installing.

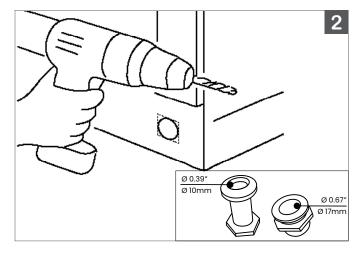

2. Drill a hole in the desired sensor location.

NOTE: Only 1 drill hole is required, with 2 diameter options available: Ø0.39" (Ø10mm) or Ø0.67" (Ø 17mm).

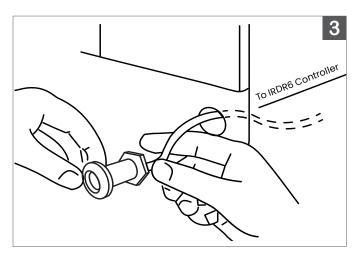


3. Feed sensor control wire through the hole first and fix sensor in place.


ILLUMINATE EVERYTHING





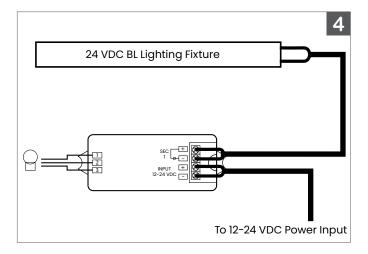

4. Connect sensor to luminaire and power source.

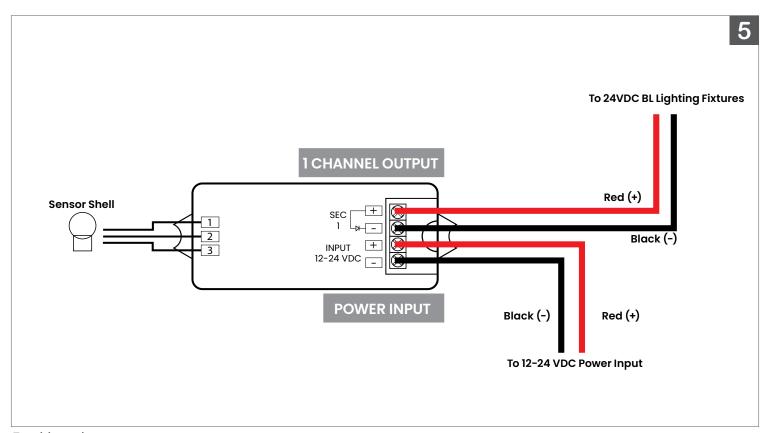

5. Wiring Diagram

