




***10 Buttons**
10 buttons for direct access

***3 Buttons**
2 buttons to change scene
+ 1 button to change zone

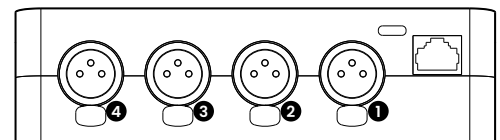

- ❶ XLR 3pin : Universe 1
- ❷ XLR 3pin : Universe 2
- ❸ XLR 3pin : Universe 3
- ❹ XLR 3pin : Universe 4

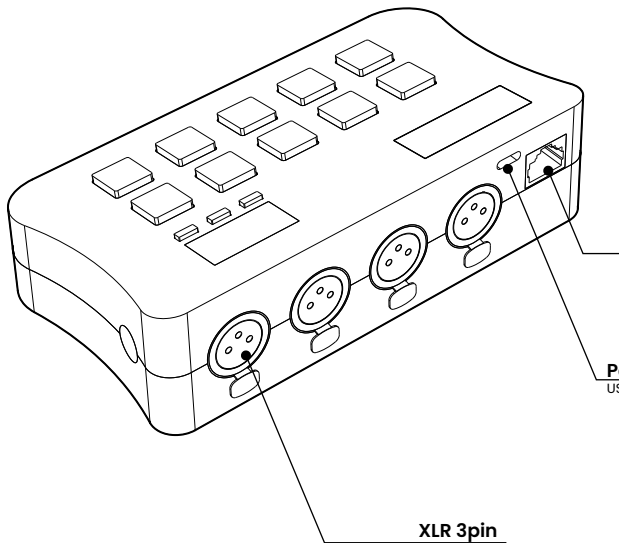

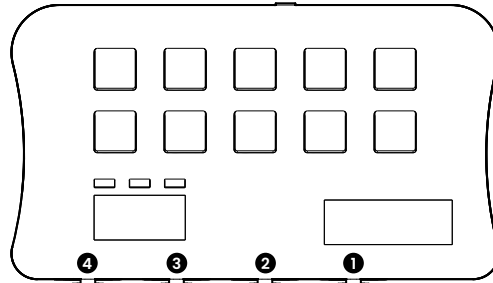

XLR 3Pin
DMX OUT(Univer #2)
DMX Address 513-1024

XLR 3Pin
DMX OUT(Univer #1)
DMX Address 0-512

DMX512 Daisy Chaining

All devices in a DMX512 system must be connected in a "daisy chain" fashion. It is not permissible to have branching or splitting runs.

