



DMX/RDM: Choose the RDM setting if RDM-enabled devices are connected to the DMX outputs. Choose DMX otherwise.

Link Out/Terminate: Choose "Link Out" if there is a connection th the throughput.

Choose "Terminate" otherwise.

DMX CABLE



