




Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.
Local building and electrical codes should be consulted before installation.


ATTENTION


- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

INSTALLATION LAYOUT

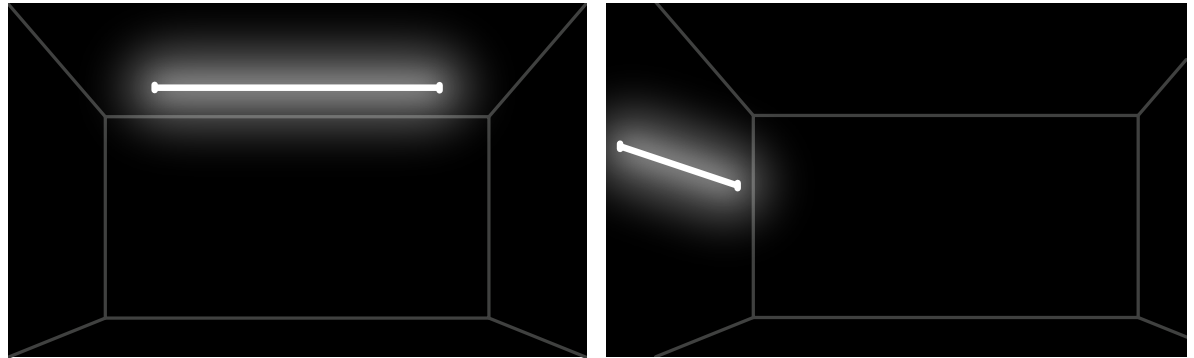

COMPONENTS

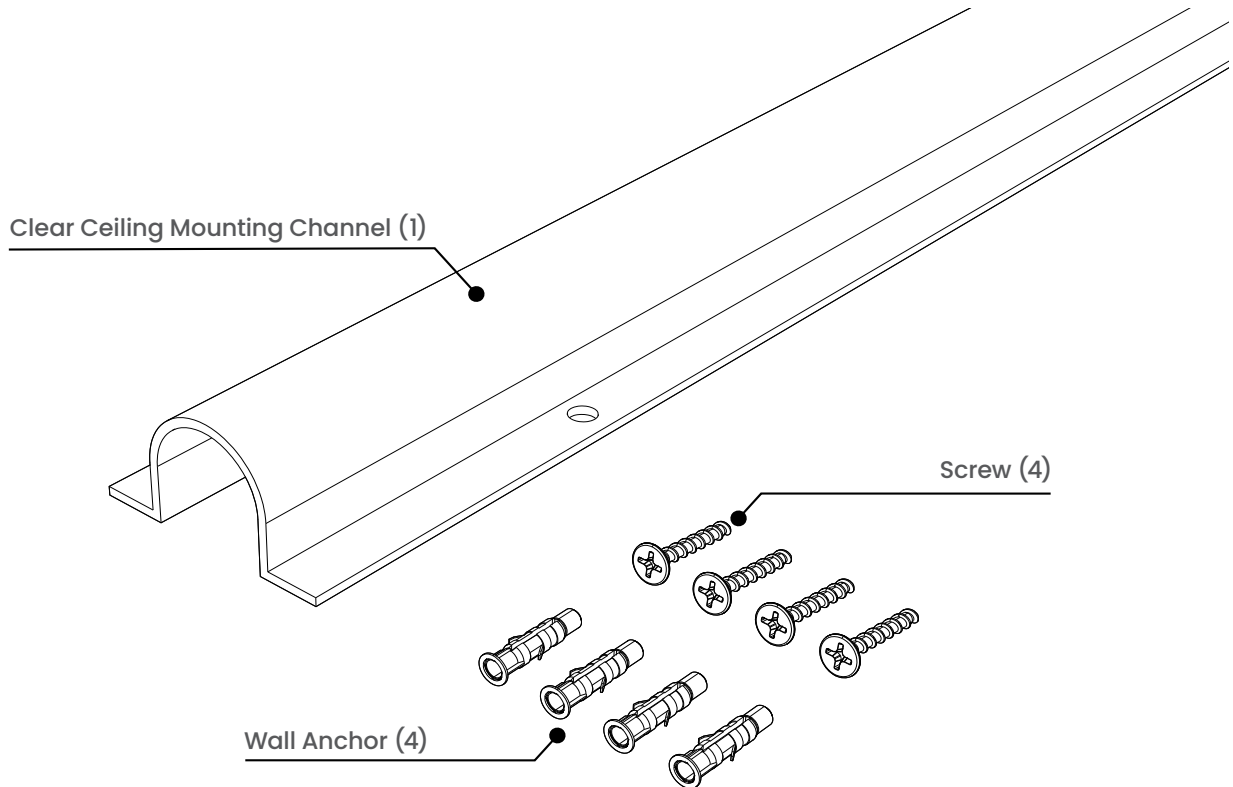


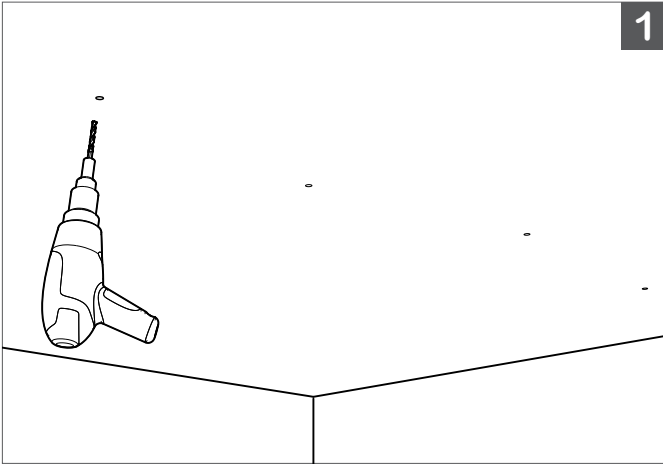


1.

Mark the drilling positions on the wall as indicated in the diagram below.


Use a 6mm drill bit to drill holes at the marked positions.

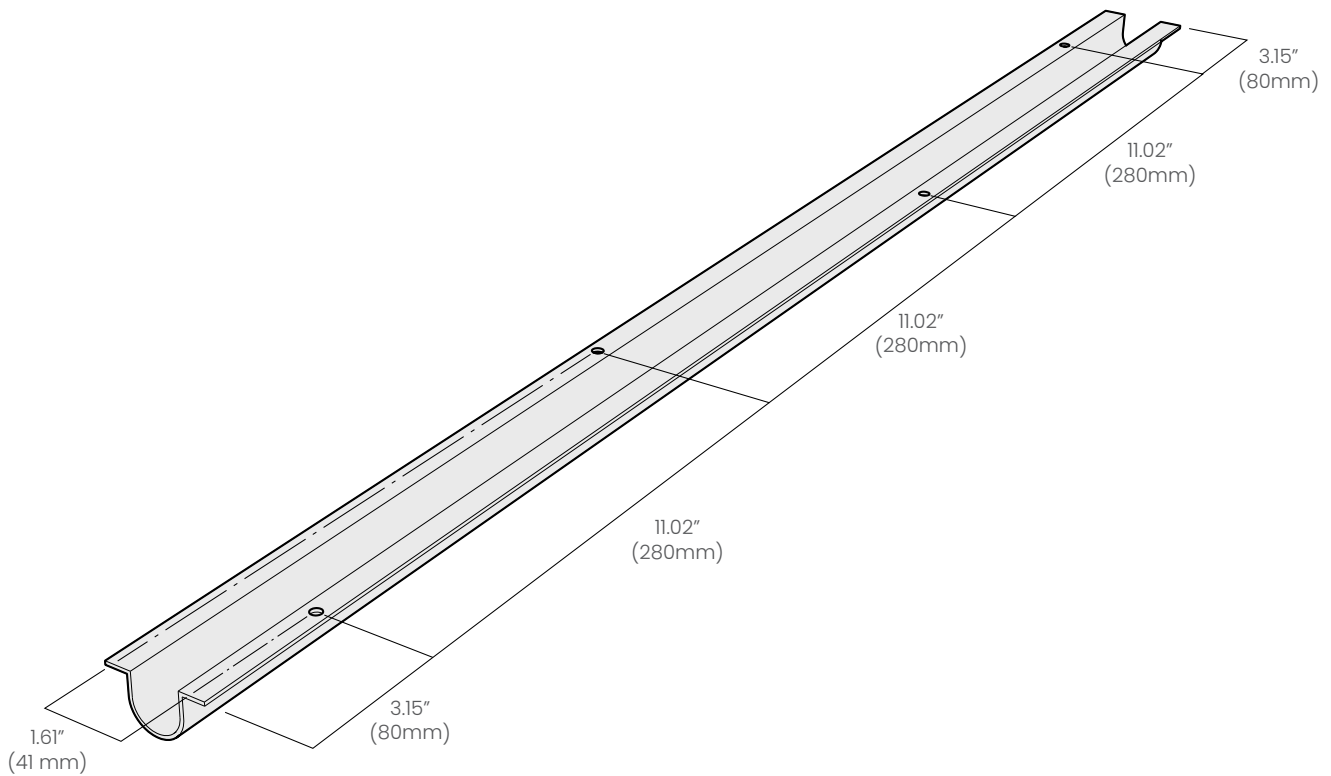

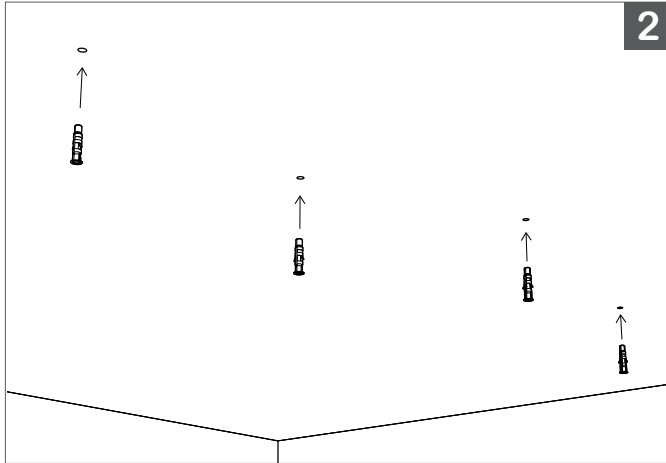


2.

Insert the wall anchors into the drilled holes.

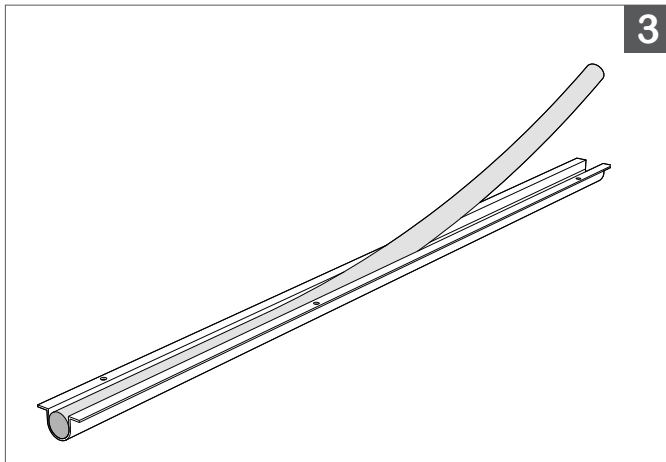

3.


Gently place the **N360** product into the clear ceiling mounting channel.

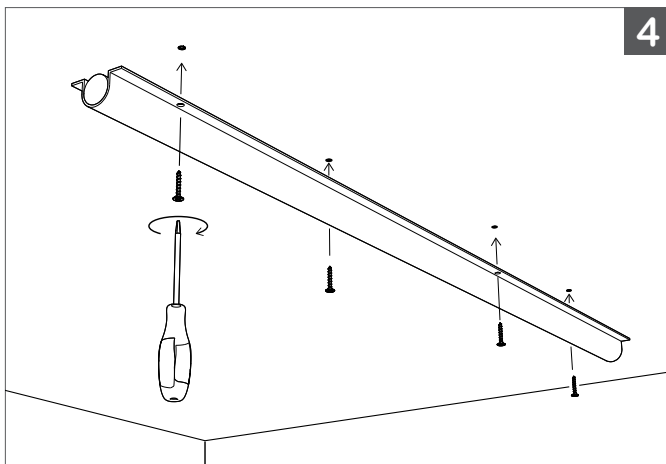

4.

Align the screw holes of the clear ceiling mounting channel with the drilled holes on the ceiling, and fasten the screws into the wall anchors until the channel is securely mounted.



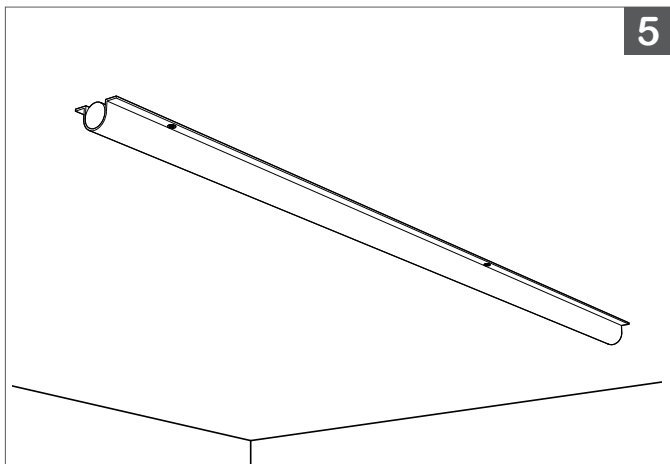

5

5.

DONE.

