Concealed






Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.

Local building and electrical codes should be consulted before installation.


ATTENTION

- $\bullet \ \ \text{There is potential danger of electrical shock when operating electrical components}.$
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

INSTALLATION LAYOUT

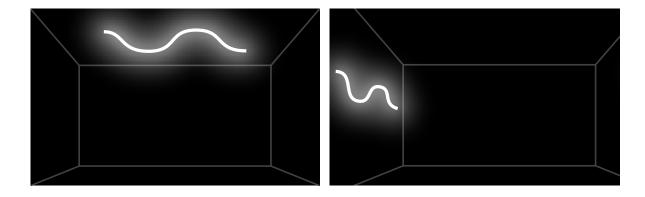


COMPONENTS

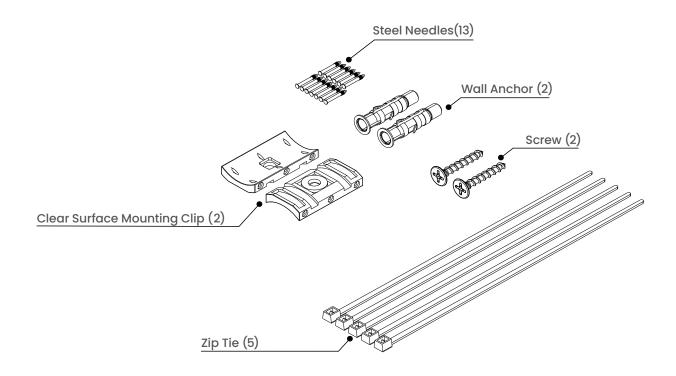



BL LIGHTING


Concealed

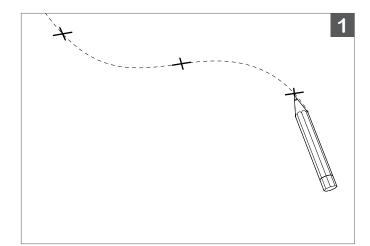

1.


Draw the centerline for the desired shape of the **N360** product, and mark where the mounting clips should be positioned along this line.

The spacing between mounting clips should be no more than 19.7" (500mm).

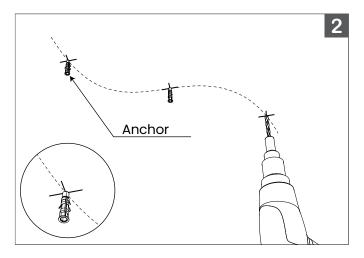

2.


Drill holes at the marked positions for the mounting clips, then insert anchors into the holes.

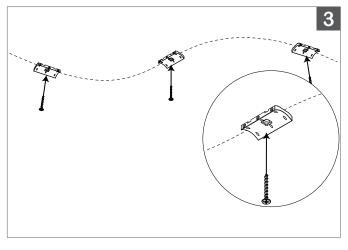

3.


Secure the mounting clips firmly with screws at the anchor positions, ensuring the screws do not slip.



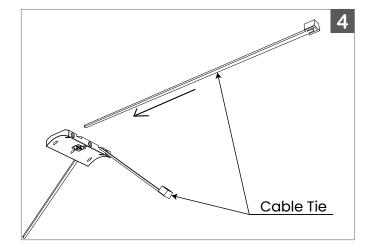


4.

Pass two cable ties between the mounting clips and position them centrally to hold the **N360** product securely in place.

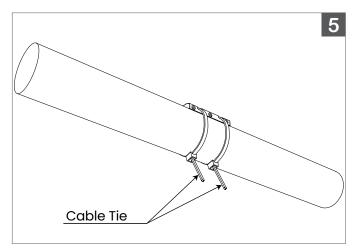

5.

Tighten the cable ties to temporarily securely hold the N360 product in place.

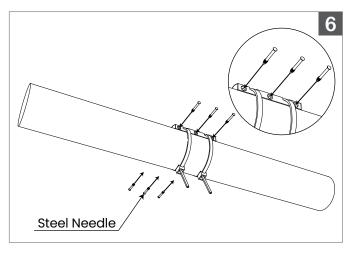


6.

Insert six steel needles from both sides into the mounting clip to secure the N360 product.






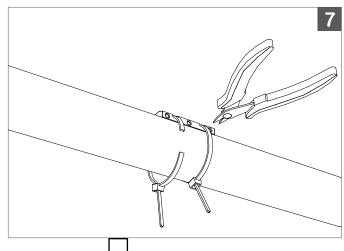

7.

Cut and remove the zip tie.

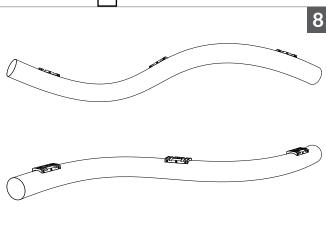

8.

DONE.

