
Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.

Local building and electrical codes should be consulted before installation.

ATTENTION

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

COMPONENTS

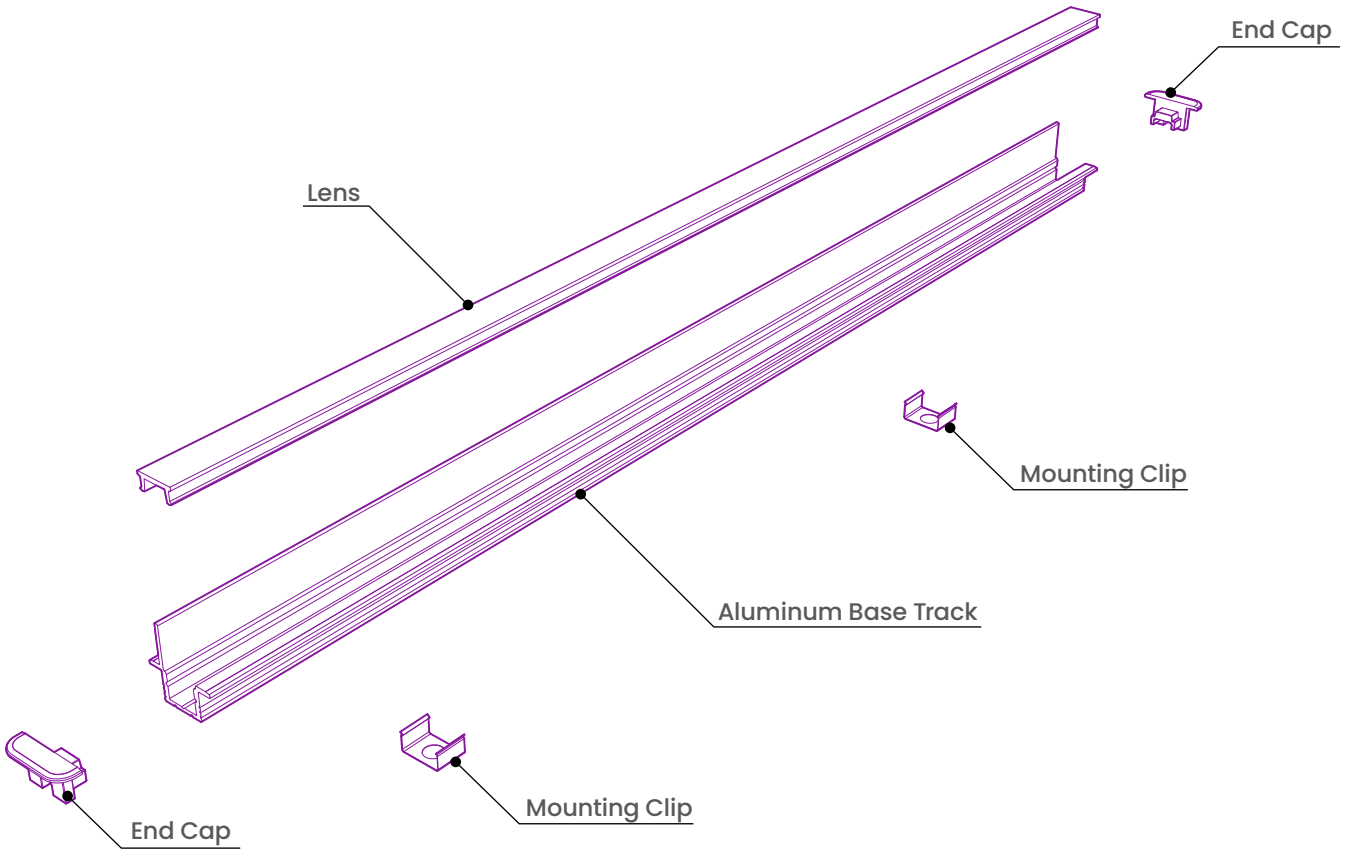

Copyright © BL INNOVATIVE LIGHTING. All Rights Reserved.


Solid State Lighting is sensitive to power fluctuations. Surge protection is highly recommended for all LED lighting products and should be on a dedicated circuit to protect against premature failure. Lack of surge protection may void your warranty.

Designed & Assembled in North America.

Specifications subject to change without notice. Please refer to our website at bllighting.com for current technical data.

For more information, please download the BL LIGHTING catalog

bllighting.com

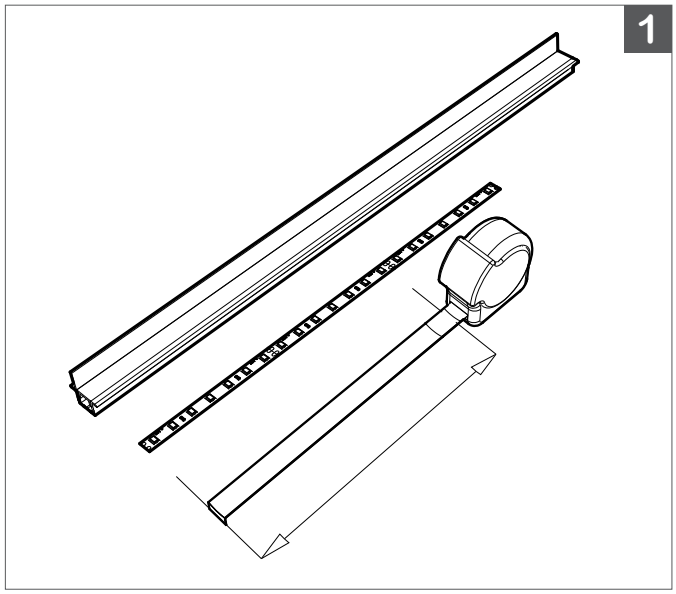


1, 2

Measure the **RN1313** profile alongside BL Flexform to ensure both components are cut to the correct length.

The use of a mechanical saw is recommended.

TIP: Secure **BL Fixform LED aluminum profile** base track and lens together with tape, and cut with lens facing down.

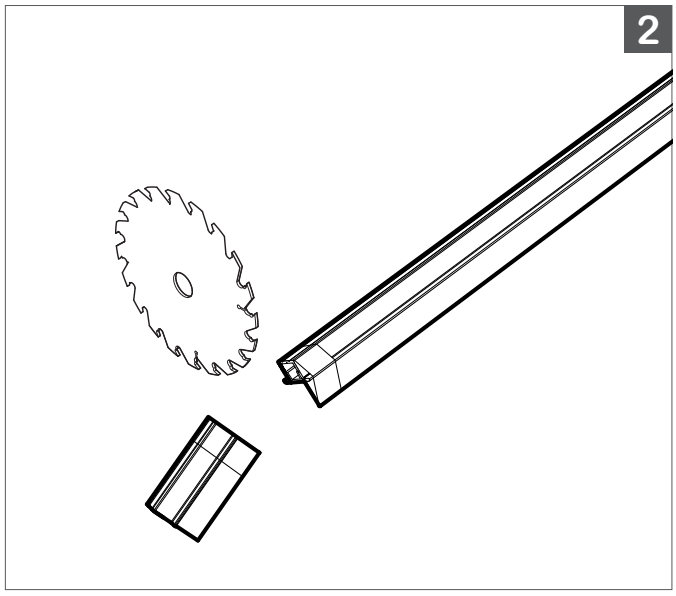

Copyright © BL INNOVATIVE LIGHTING. All Rights Reserved.


Solid State Lighting is sensitive to power fluctuations. Surge protection is highly recommended for all LED lighting products and should be on a dedicated circuit to protect against premature failure. Lack of surge protection may void your warranty.

Designed & Assembled in North America.

Specifications subject to change without notice. Please refer to our website at bllighting.com for current technical data.

For more information, please download the BL LIGHTING catalog

bllighting.com

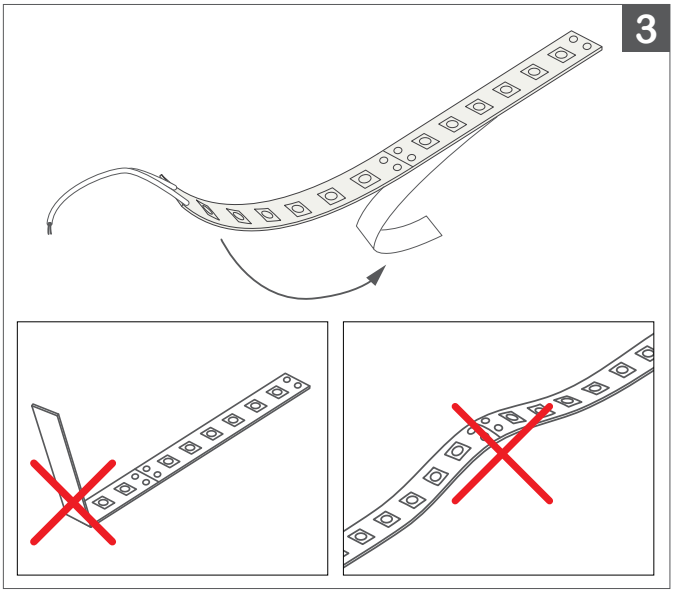


3, 4.

Installing **LED tape** into the **RN1313** profile.

IMPORTANT: Mounting surface must be clean and dry. To ensure a long-lasting bond, it is recommended to run an alcohol wipe along the inside of the base track, and allow it to dry completely prior to securing **LED tape** into place.

To begin, remove no more than 1/2" (13mm) of the double-sided tape backing from the power feed end of the **LED tape** and secure the end of the **LED tape** inside the **RN1313** profile's inner cavity, without bending or pulling up the **LED tape**, with the edge all the way to the base of the channel.

IMPORTANT: Lead wires must not be seated inside the base track, or the diffuser lens will not fit. Only the solder points and **LED tape** will fit under the lens.

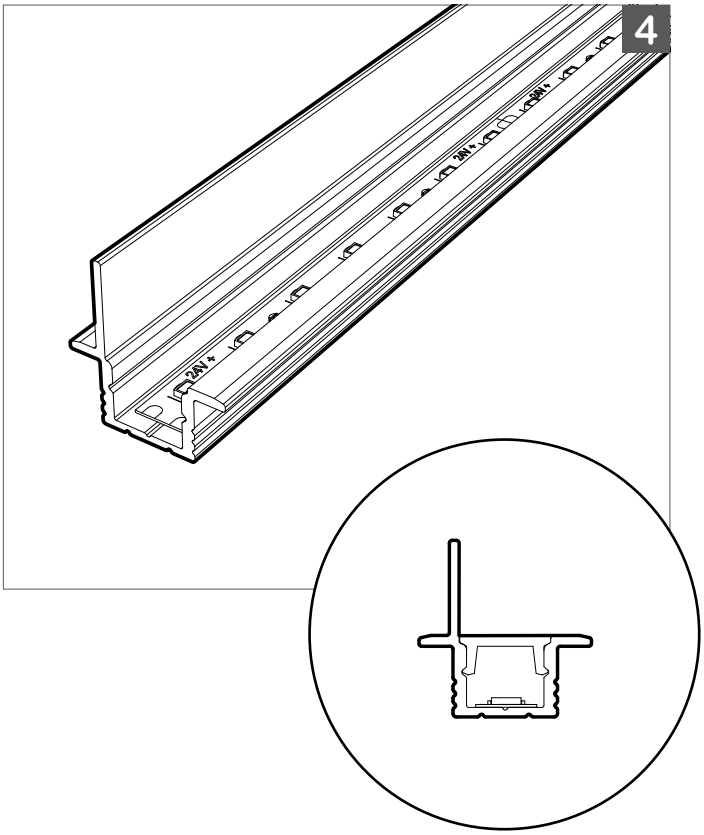

Without removing the rest of the double-sided tape, carefully set the **LED tape** into place in the channel, along the entire length. An insertion tool is provided to help gently guide the **LED tape** into place.

IMPORTANT: Do not apply excessive force when using the insertion tool. Press only between the diodes to avoid damaging the **LED tape**.

Once the **LED tape** is seated, remove the double-sided tape bit by bit, using your finger to keep the **LED tape** in place, and pressing carefully only between the diodes with the insertion tool to secure the **LED tape** to the inner wall of the channel.

Side View

** For IP68 jacketed LED tape, BL Flexform Dot-Free IP65, and down facing applications using IP65 or IP68 jacketed LED tape, please refer to the BL ADH406 installation guide.*

Copyright © BL INNOVATIVE LIGHTING. All Rights Reserved.


Solid State Lighting is sensitive to power fluctuations. Surge protection is highly recommended for all LED lighting products and should be on a dedicated circuit to protect against premature failure. Lack of surge protection may void your warranty.

Designed & Assembled in North America.

Specifications subject to change without notice. Please refer to our website at bllighting.com for current technical data.

For more information, please download the BL LIGHTING catalog


INSTALLATION
Recessed

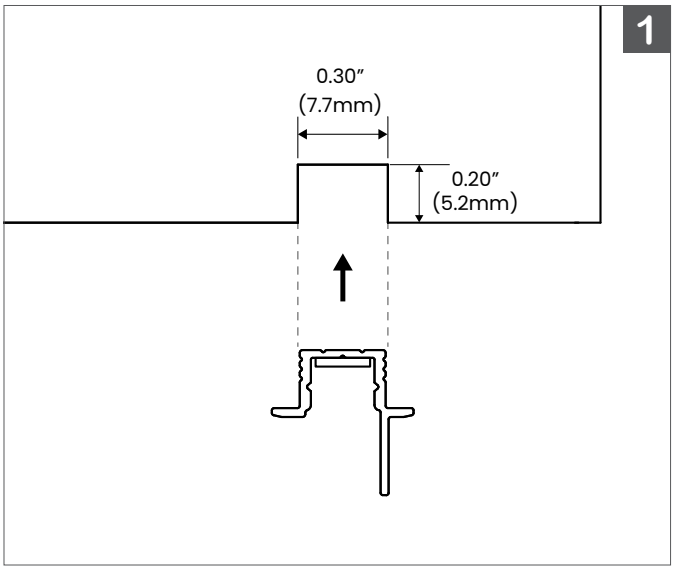

1.

Mark the installation location and cut a slot 0.30" (7.7 mm) wide and 0.20" (5.2 mm) deep, as shown in the illustration.

NOTE: If the **RN1313** profile fits snugly and securely in the slot, adhesive is not required. Ensure the profile is firmly held in place before proceeding.

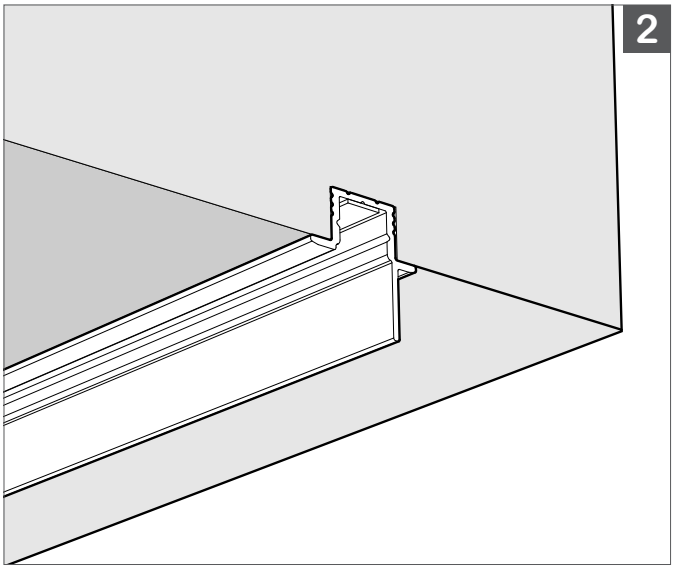

2.

Insert the **RN1313** profile into the prepared slot.
Verify that the profile is correctly aligned, fully seated, and securely retained.

Copyright © BL INNOVATIVE LIGHTING. All Rights Reserved.

Solid State Lighting is sensitive to power fluctuations. Surge protection is highly recommended for all LED lighting products and should be on a dedicated circuit to protect against premature failure. Lack of surge protection may void your warranty.


Designed & Assembled in North America.

Specifications subject to change without notice. Please refer to our website at bllighting.com for current technical data.

For more information, please download the BL LIGHTING catalog


bllighting.com

INSTALLATION
Recessed

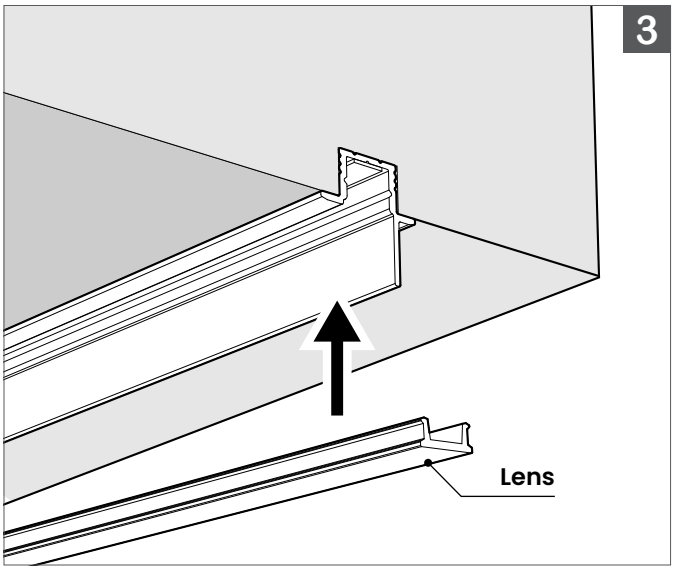

3.

Fit the lens into the **RN1313** profile, ensuring it is fully seated along its entire length.

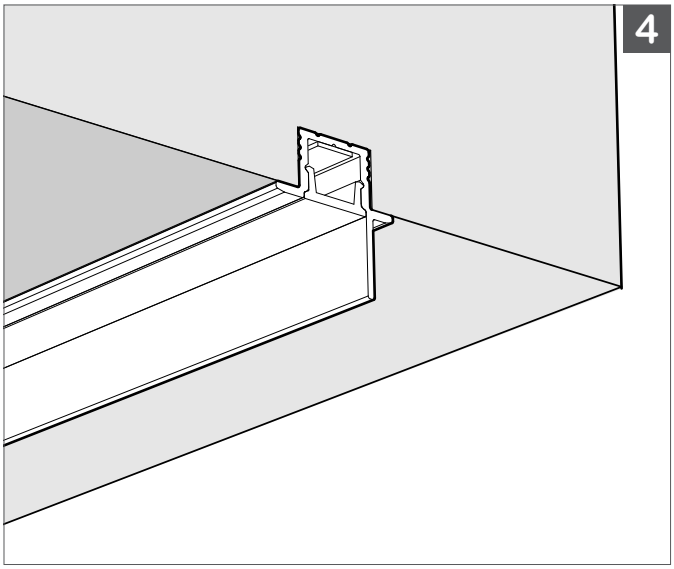

4.

Installation is complete.

Copyright © BL INNOVATIVE LIGHTING. All Rights Reserved.

Solid State Lighting is sensitive to power fluctuations. Surge protection is highly recommended for all LED lighting products and should be on a dedicated circuit to protect against premature failure. Lack of surge protection may void your warranty.


Designed & Assembled in North America.

Specifications subject to change without notice. Please refer to our website at bllighting.com for current technical data.

For more information, please download the BL LIGHTING catalog

bllighting.com


INSTALLATION
Mounting Clips

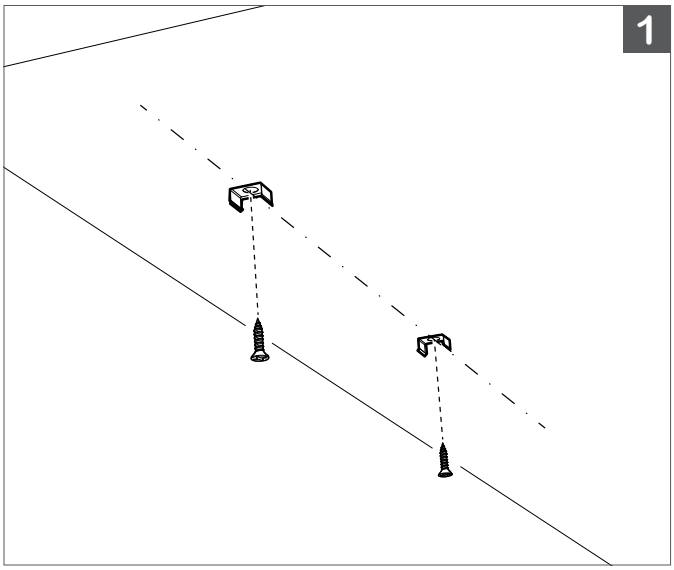


1.

Position the mounting clips at the designated installation locations.

Secure the mounting clips with screws. A minimum of two mounting clips is recommended for each section of LED profile up to 8 ft long. Additional clips may be required depending on the application and mounting orientation.

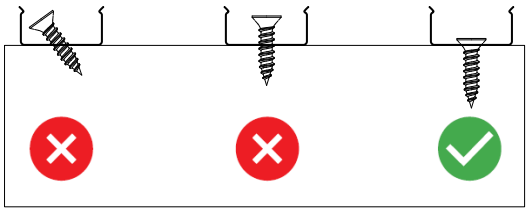

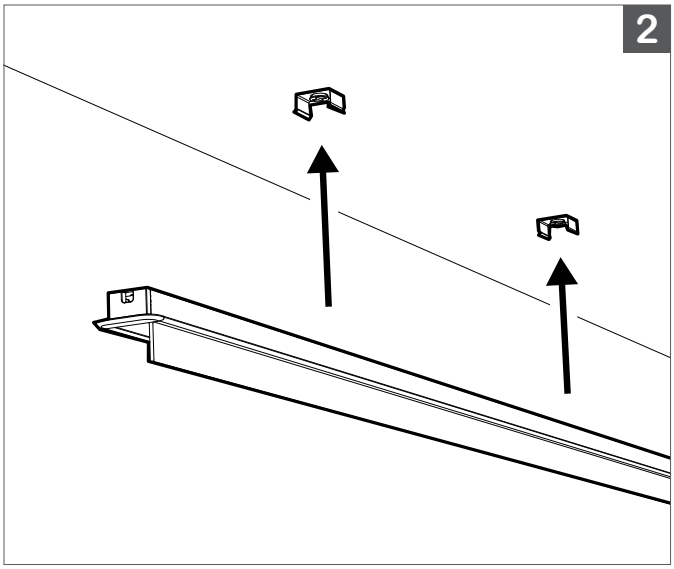

2.

Snap the assembled **RN1313** profile on the mounting clip.

Copyright © BL INNOVATIVE LIGHTING. All Rights Reserved.


Solid State Lighting is sensitive to power fluctuations. Surge protection is highly recommended for all LED lighting products and should be on a dedicated circuit to protect against premature failure. Lack of surge protection may void your warranty.

Designed & Assembled in North America.

Specifications subject to change without notice. Please refer to our website at bllighting.com for current technical data.

For more information, please download the BL LIGHTING catalog

bllighting.com

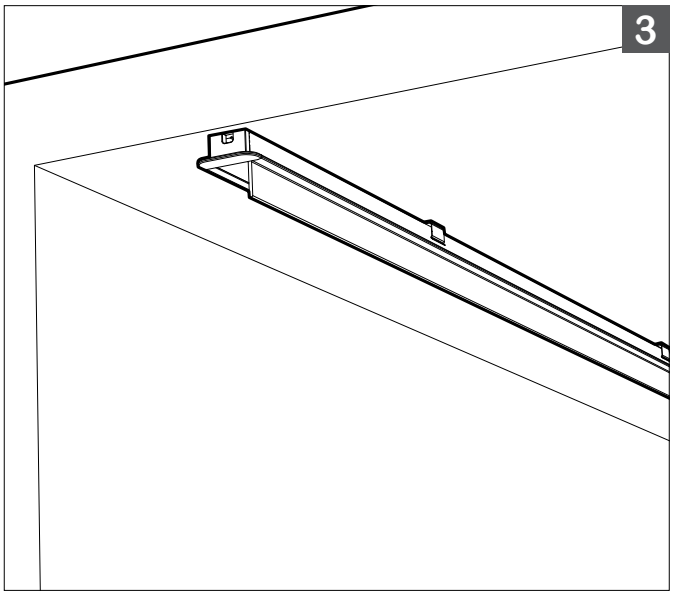

3.

Installation is complete.

Copyright © BL INNOVATIVE LIGHTING. All Rights Reserved.

Solid State Lighting is sensitive to power fluctuations. Surge protection is highly recommended for all LED lighting products and should be on a dedicated circuit to protect against premature failure. Lack of surge protection may void your warranty.

Designed & Assembled in North America.

Specifications subject to change without notice. Please refer to our website at bllighting.com for current technical data.

For more information, please download the BL LIGHTING catalog

bllighting.com