




Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.
Local building and electrical codes should be consulted before installation.

ATTENTION


- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

CLIP Ideal for wood and other porous surfaces

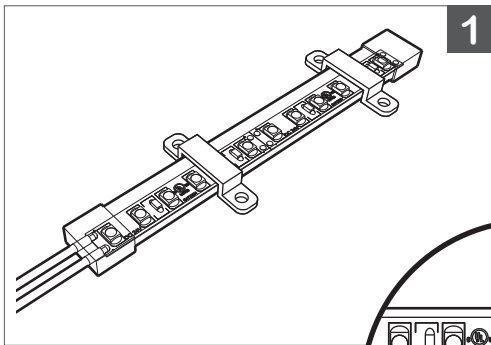


1.

- A. Hold **BL flexFORM D1** tight to mounting surface.
- B. Align clips in-between LED diodes (not directly over them).

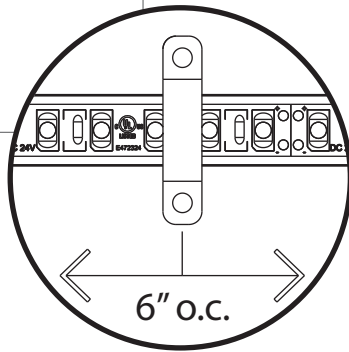

NOTE: Two clips per linear foot is recommended for secure fastening.

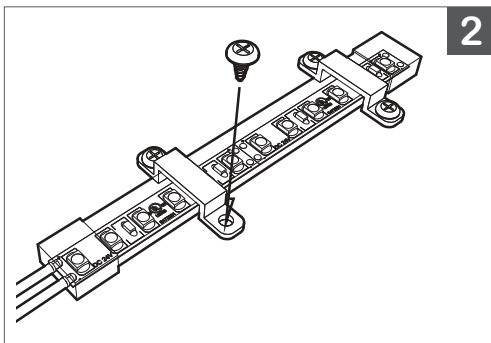

2.

Mount clips to surface with screws.

IMPORTANT: Be careful not to over-tighten screws when using power tools.





Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.
Local building and electrical codes should be consulted before installation.


ATTENTION

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

ADHESIVE

Ideal for smooth and/or delicate surfaces


1

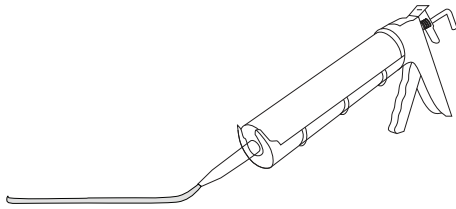

1. Evenly bead adhesive to surface at require length.

IMPORTANT: Ensure surface is clean and dry before applying adhesive.

2

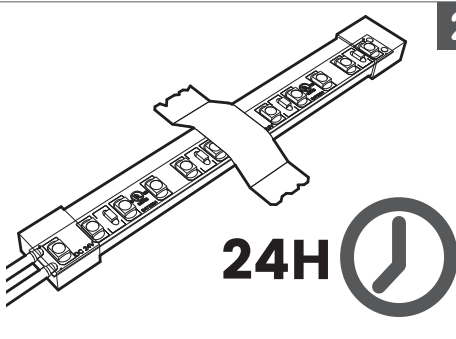

2.

- Firmly press **BL flexFORM D1** into adhesive.
- Secure **BL flexFORM D1** into position with masking tape.
- Allow the adhesive to cure for 24 hours before removing the masking tape.






Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.
Local building and electrical codes should be consulted before installation.

ATTENTION

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.


DOUBLE-SIDED TAPE Ideal for temporary installations

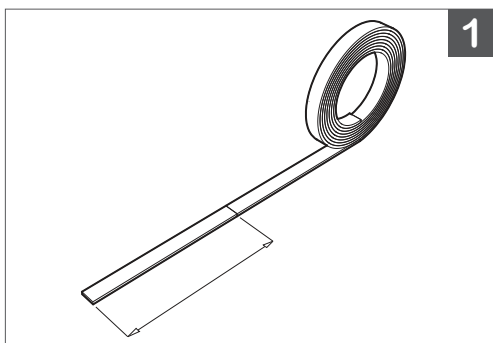

1.

- A. Measure and cut required length of tape.
- B. Stick tape to desired surface.

IMPORTANT: Ensure surface is clean and dry before applying tape.

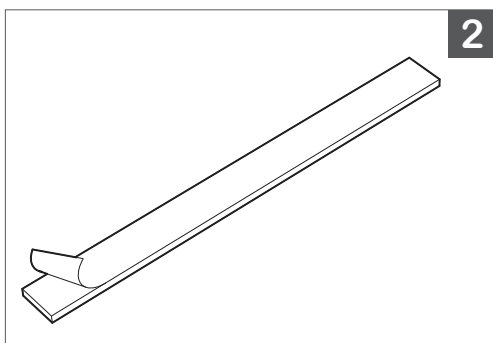

2.

- A. Remove protective layer from tape, exposing adhesive.
- B. Center and firmly press **BL flexFORM D1** to tape.

IMPORTANT: Double-Sided Tape is not suitable for applications where **BL flexFORM D1** is to be installed in a vertical or down-facing position.

