




Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
 Local building and electrical codes should be consulted before installation.

**ATTENTION**

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

## Components:

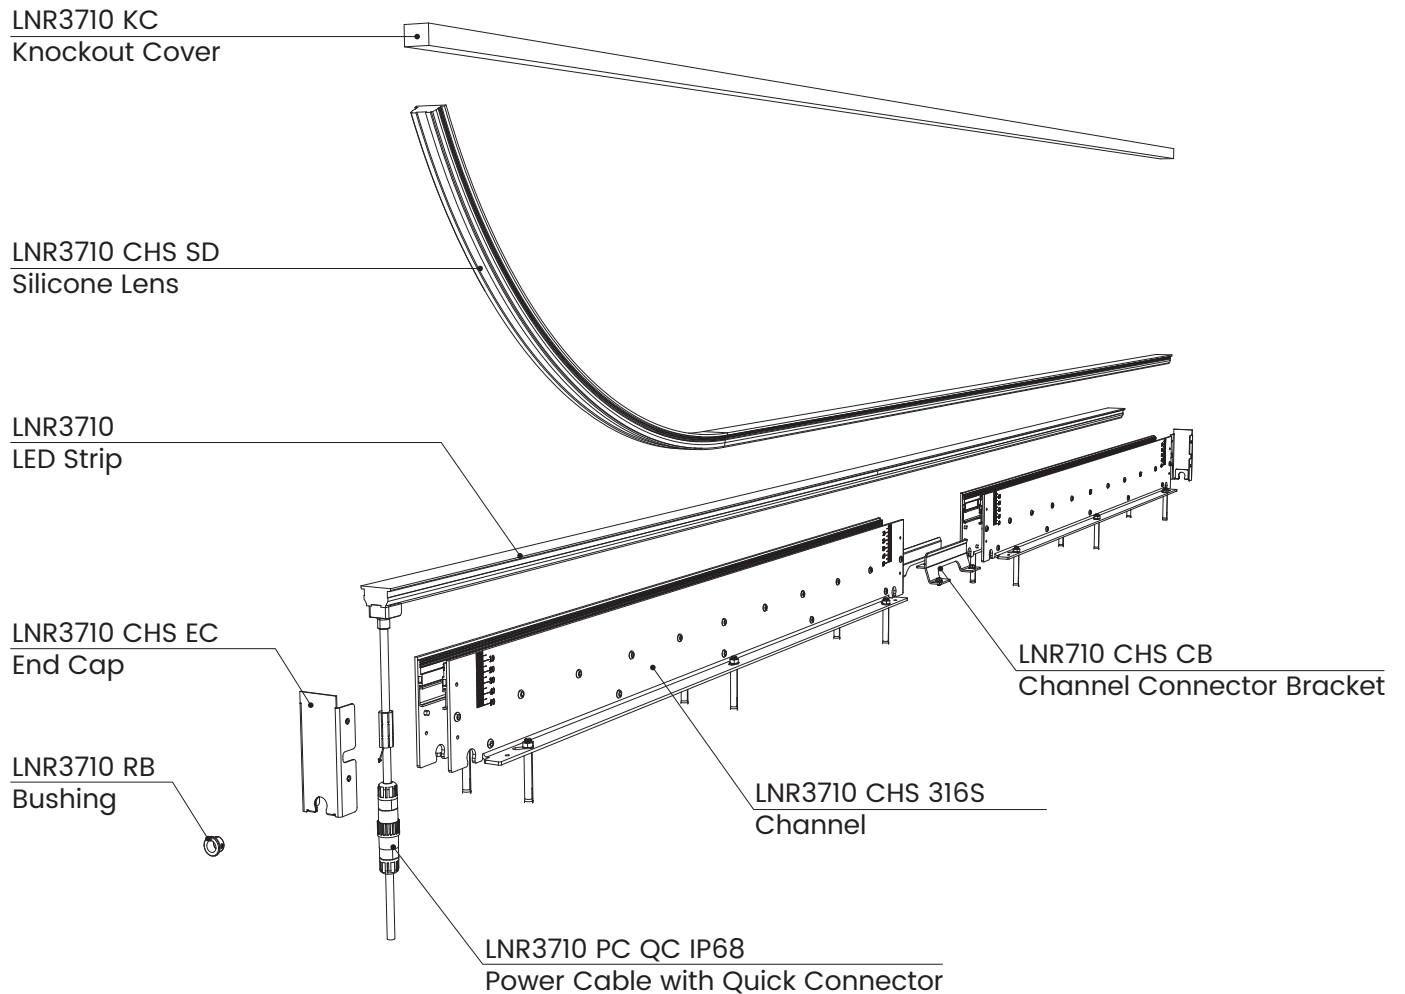



Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
Local building and electrical codes should be consulted before installation.

**ATTENTION**

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

## Read all instructions prior to beginning installation

Take appropriate safety precautions, and wear safety glasses and gloves when installing, maintaining or servicing luminaires.

**Note!**

- Installation site must provide adequate drainage.
- Upon installation, the luminaire surface must be flush with surrounding finished ground surface.
- Luminaires must be installed on top of a concrete footing.
- Use of drain pipes and/or a purpose built drainage system may be required to prevent luminaires from long-term submersion.
- Luminaires in wet locations must be installed in a permeable layer of adequate depth to allow water to drain freely away from the luminaire.
- Acceptable materials for a permeable base layer include drainage gravel, pea gravel, and sand, to be installed along the entire luminaire lengths, at adequate depth to provide drainage.






Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
Local building and electrical codes should be consulted before installation.

**ATTENTION**

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

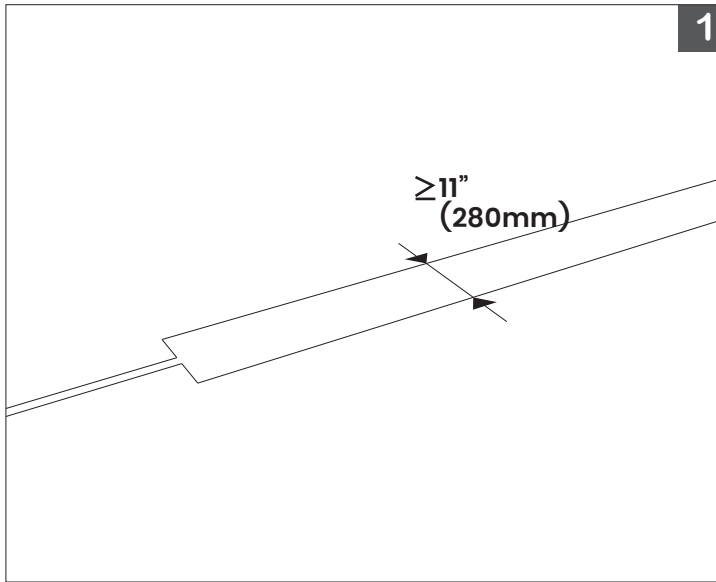


**1**

**Site Preparation**

Prepare the ground for installation.

Mark and layout BL inGROUND LNR3710 luminaire, cable and conduit (by others) positions

1. Position conduit for the Power Cable BL inGROUND LNR3710 placement.

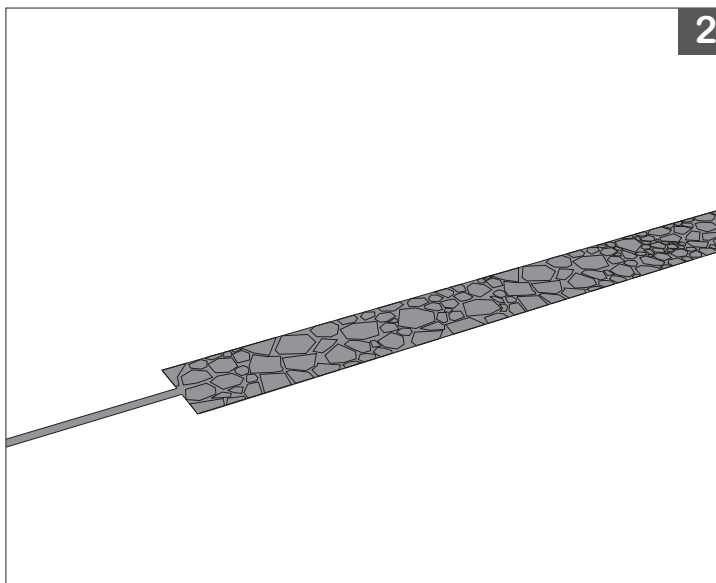

**2**

2. Cut out where marked.





Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
Local building and electrical codes should be consulted before installation.


**ATTENTION**

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

3.

Depth of cutout in ground surface will depend upon the depth of permeable layer, concrete top layer, and concrete footing size required.

The permeable layer must be of adequate depth to provide drainage away from the luminaire.

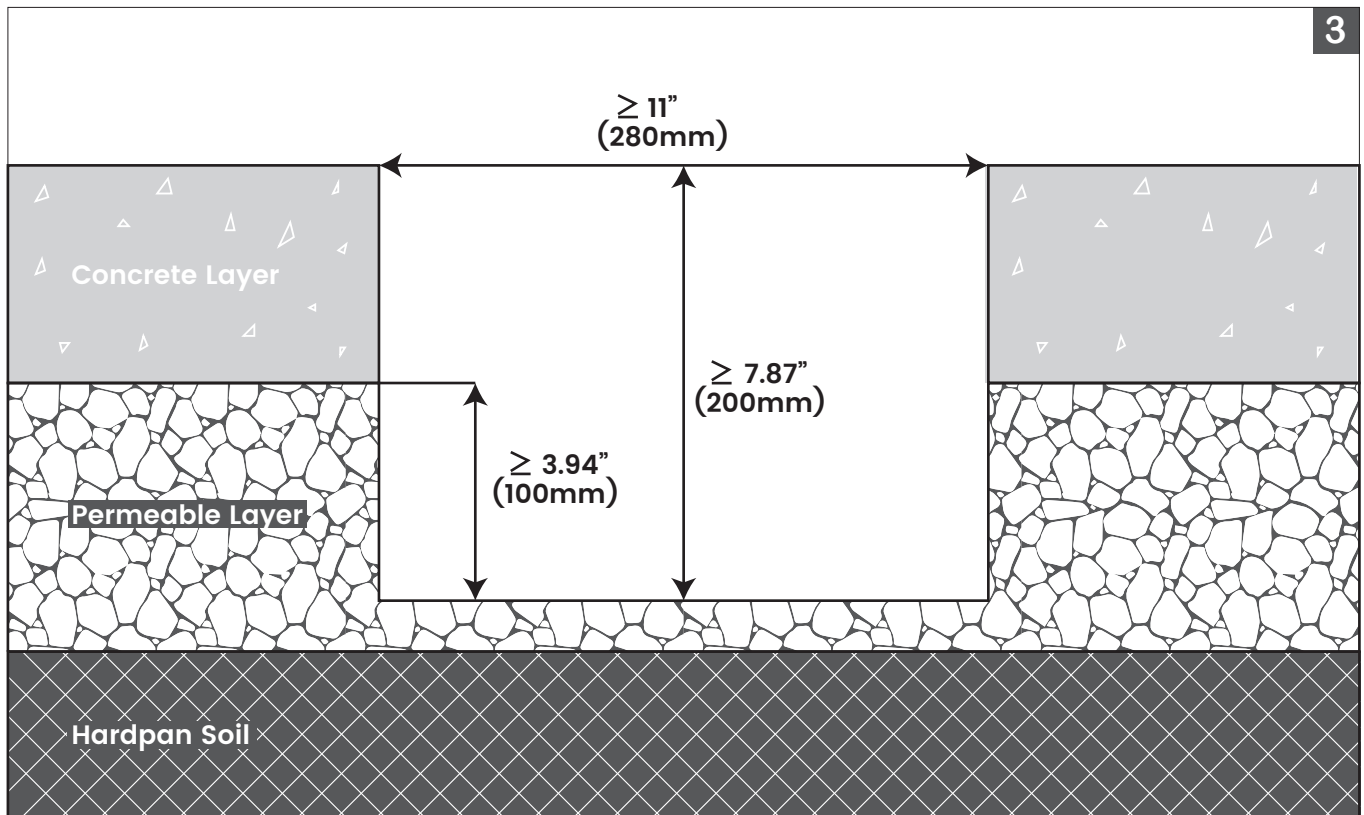




Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
Local building and electrical codes should be consulted before installation.


## ATTENTION

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

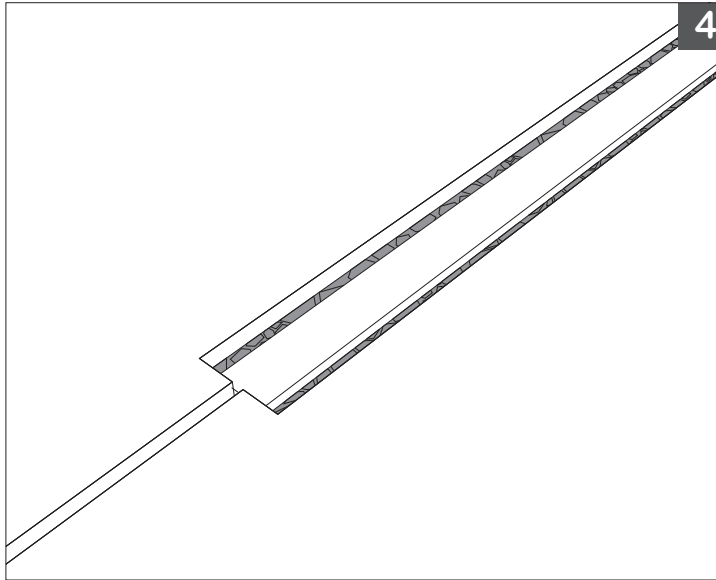

4. Build a concrete footing to support BL inGROUND LNR3710 with a solid mounting base.

Depending on site conditions, drain pipes may be required to be installed within the concrete footing.

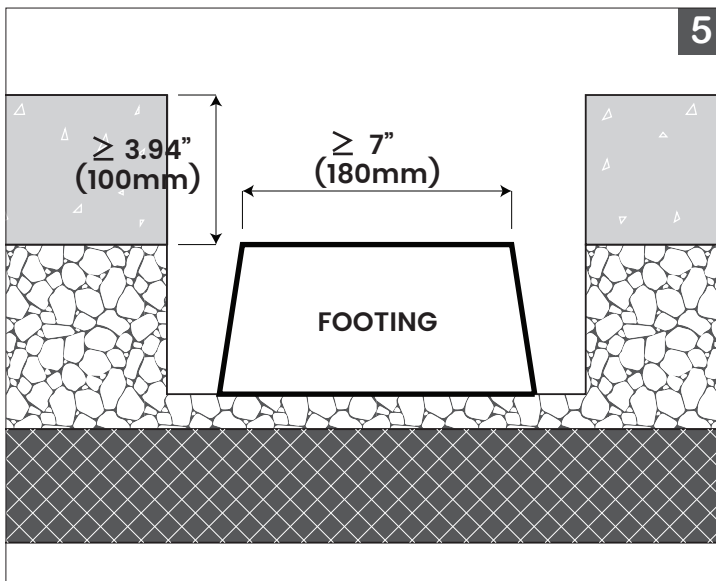

5. The concrete footing must be level and of adequate size to support the luminaire along the entire length, and to fix the luminaire directly to the footing with expansion bolts.

The concrete footing must provide a solid mounting surface and enable the luminaire, once installed, to remain level with the surrounding surface.





Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
Local building and electrical codes should be consulted before installation.


**ATTENTION**

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

**Cable Conduit & Channel Installation**

Note! Do not install the LED into the Channel at this time

- 6.
- Lay conduit and feed Power Cable through to BL inGROUND LNR3710 marked position, ensuring that a minimum of 1Ft (30cm) of cable extends from conduit end. Verify that the Quick Connect protective cap is in place to protect the end from moisture, dirt and debris.

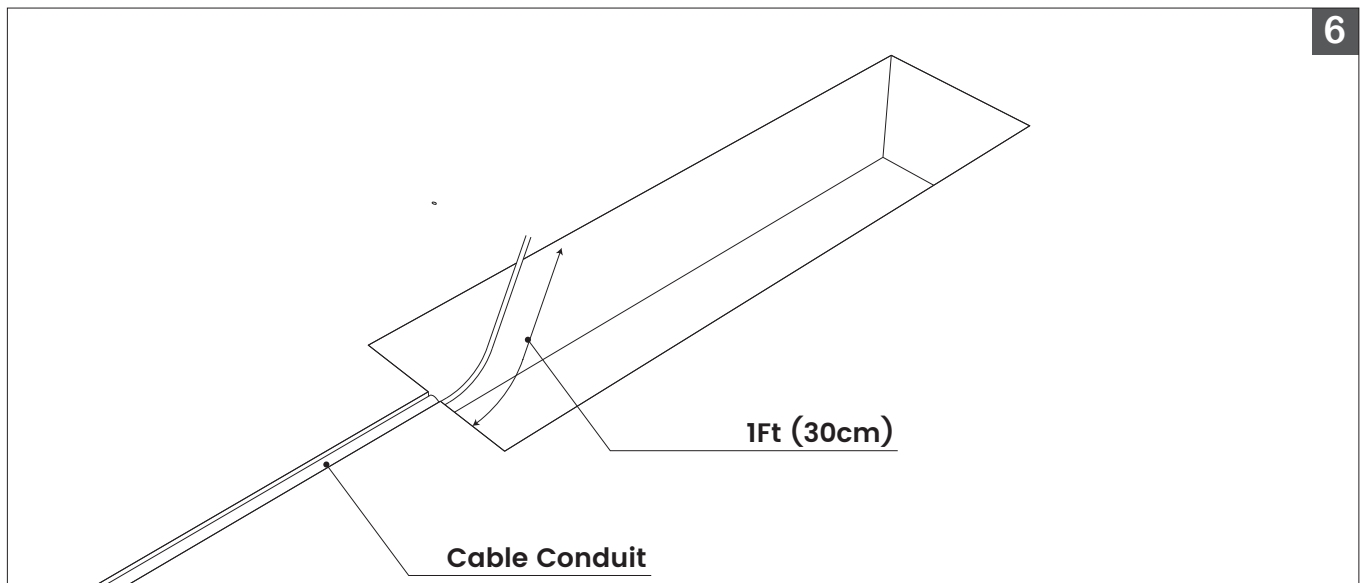



Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
 Local building and electrical codes should be consulted before installation.



**ATTENTION**

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

**Channel Installation**

7 & 8.

Starting from the Power Cable feed end, fasten the BL inGROUND LNR3710 Channel to the concrete footing.

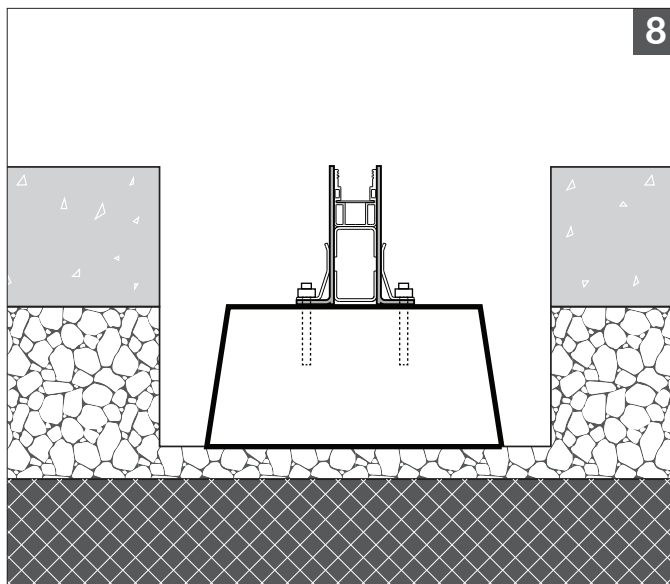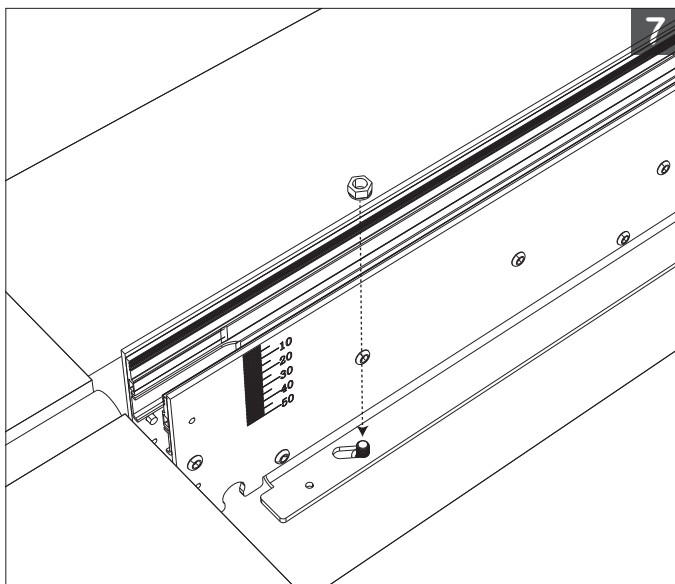

9.

Affix the Stainless Steel End Cap to the Channel at the Power Cable feed end.

10.

Verify that the Quick Connect protective cap is in place to protect the end from moisture, dirt and debris, and draw the Power Cable through the End Cap hole.








Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
Local building and electrical codes should be consulted before installation.

**ATTENTION**

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

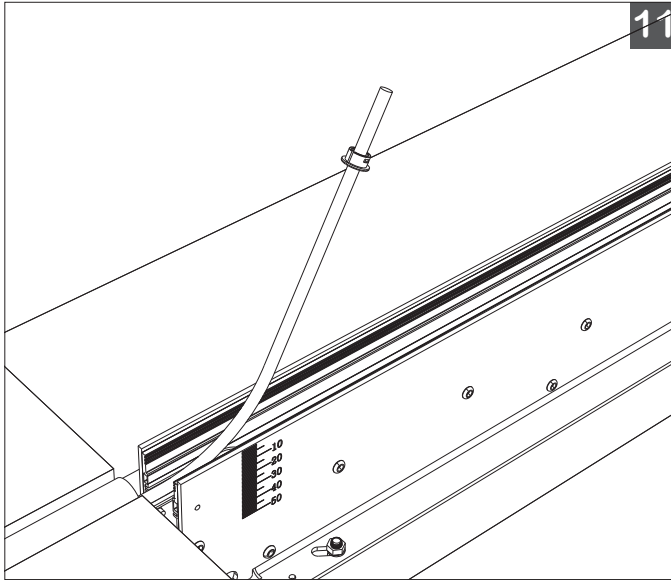

11,12 & 13.  
Slip the Bushing over the wires, slide to the End Cap and seat in place.

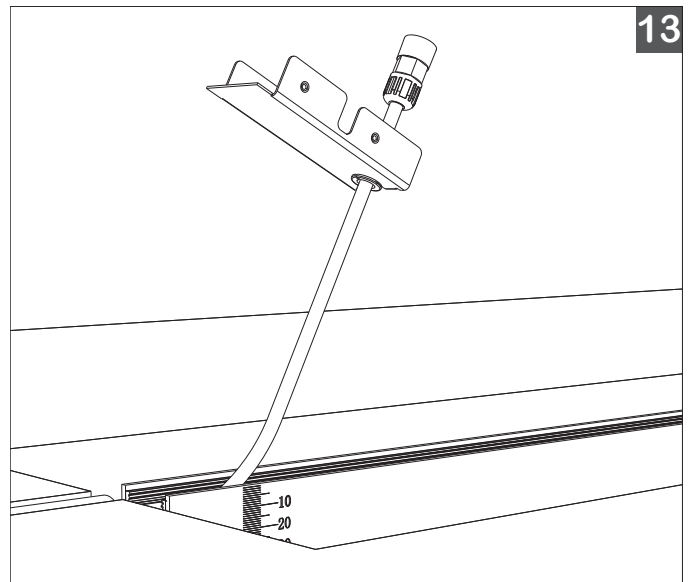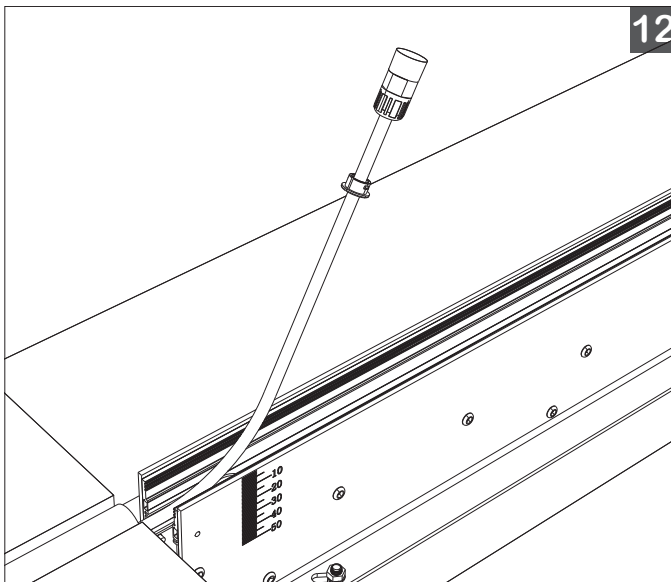






Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
Local building and electrical codes should be consulted before installation.


**ATTENTION**

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

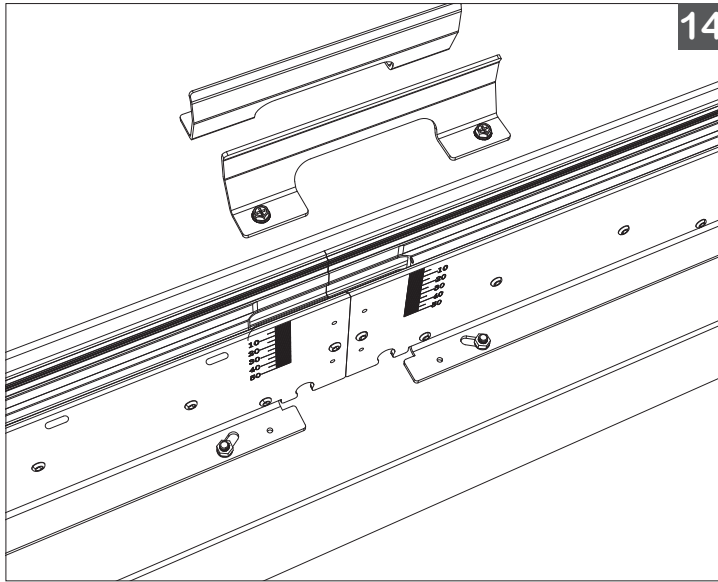

**14**

14. Secure Channel in place, and maintain secure connection and alignment with subsequent channel lengths using the Channel Connector Brackets.

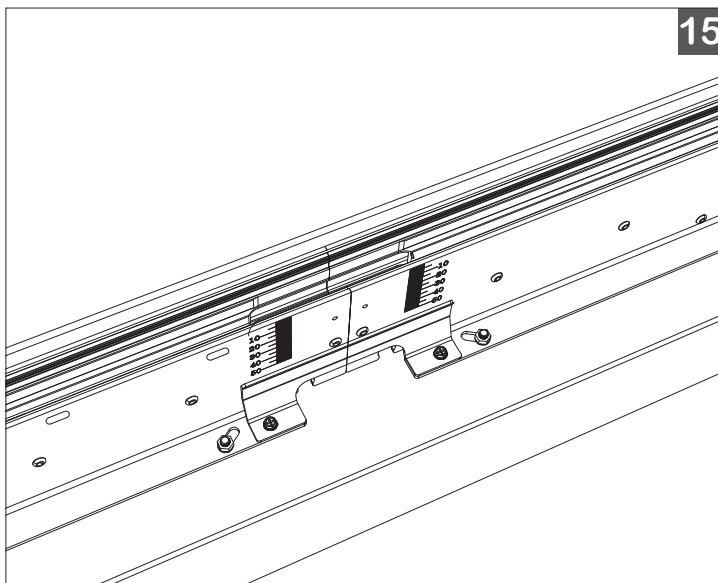

**15**

15. Fastening points are located on the flanged Channel base.

**Note!**

Ensure fasteners are secure, and not over-tightened.






Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
Local building and electrical codes should be consulted before installation.

## ATTENTION

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

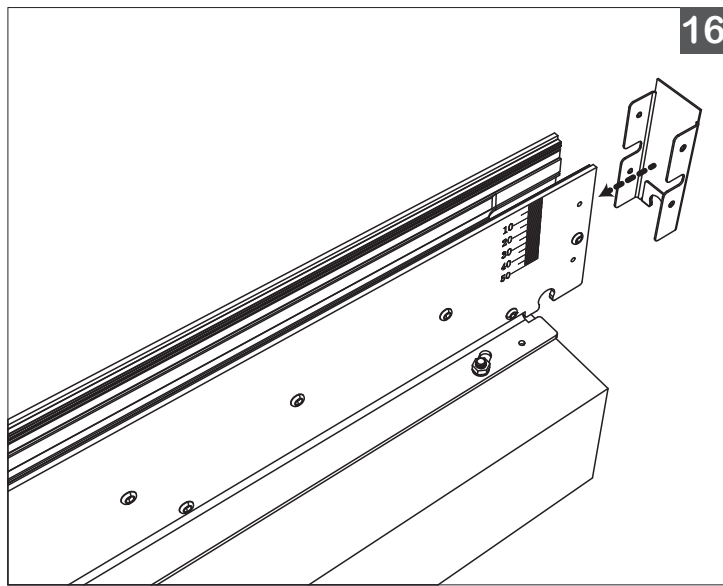

16.  
Secure End Cap to the last Channel in line.






Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
Local building and electrical codes should be consulted before installation.

## ATTENTION

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

17 & 18.

The BL inGROUND LNR3710 luminaire is constructed with internal weep holes, which allow water to funnel down and through the drain holes located on each side at the end of the channel, adjacent to the Channel Connector Brackets. All drain holes must be kept clear.

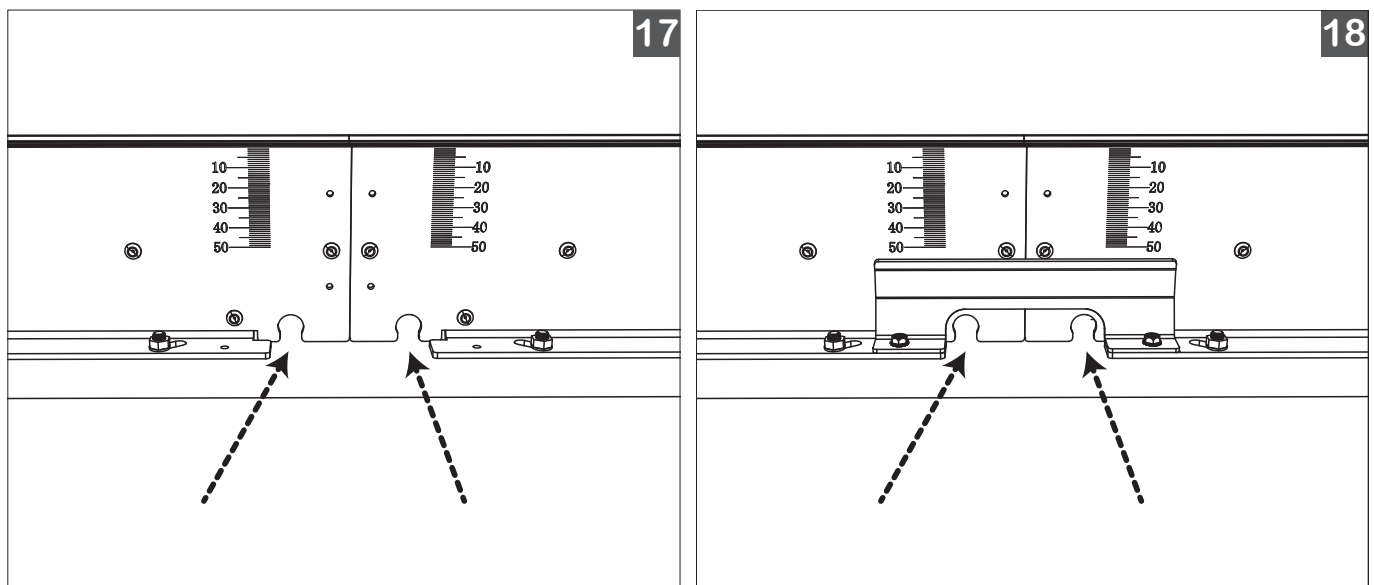




Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
Local building and electrical codes should be consulted before installation.

**ATTENTION**


- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

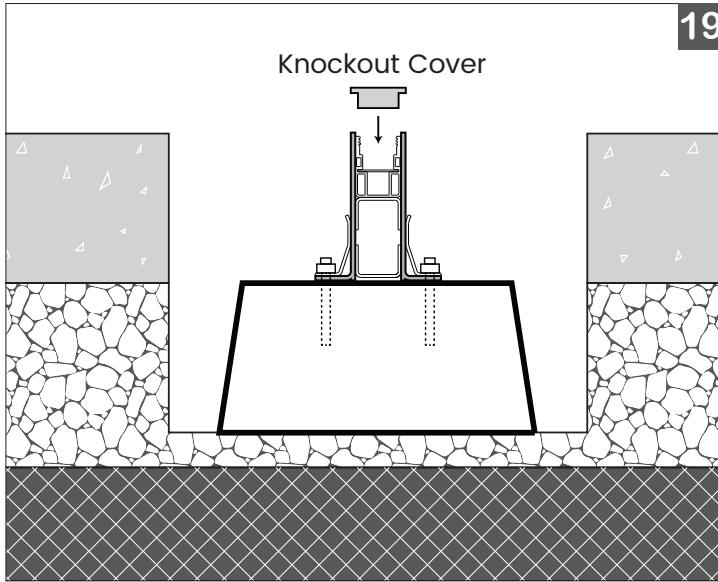

**19**

19.

Cap the top of the installed Channel with the Knockout Cover to protect the inside of the Channel housing from moisture, dirt, debris, fill material and concrete.

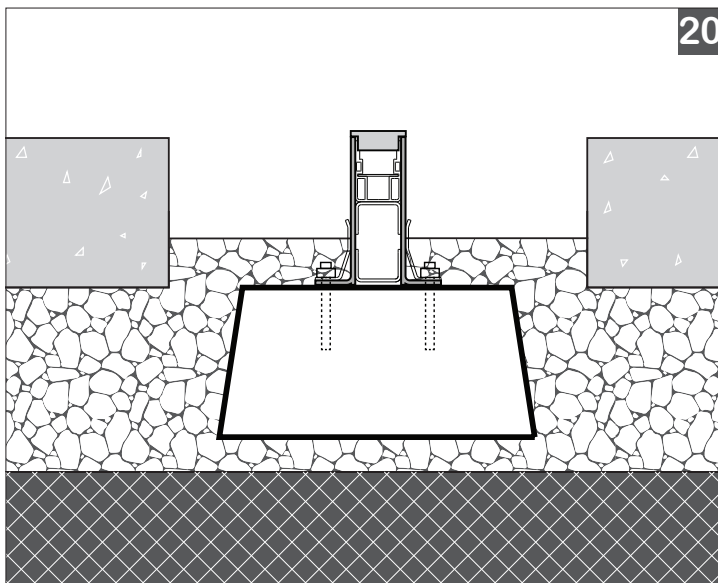

**20**

20.

Fill the hole surrounding the Channel and cable conduits with the permeable fill (drainage gravel, pea gravel, or sand).







Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
 Local building and electrical codes should be consulted before installation.

**ATTENTION**

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

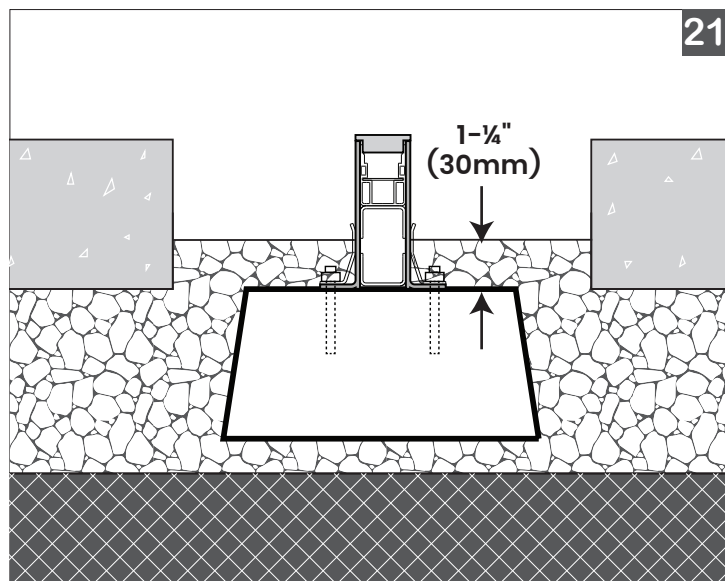
**21.**

Ensure the bottom sides of the Channel are always situated in a permeable layer, of 1-1/4" (30mm) from top of concrete footing to the top of the permeable fill layer to ensure good drainage.

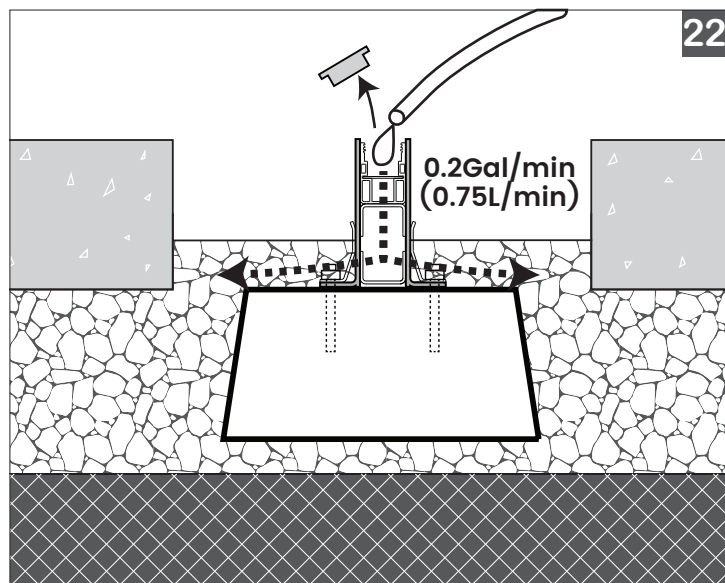
**22**
**22.**

Remove the Knockout Cover and test for adequate drainage using a hose or a bucket of water. Minimum drainage rate 0.2Gal/min (0.75L/min). Luminaire is not meant for permanent submersion in water and should be installed only once adequate drainage is confirmed.

Once drainage is confirmed, ensure the inside of the Channel is clean and dry before replacing the Knockout Cover.





Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
Local building and electrical codes should be consulted before installation.

**ATTENTION**


- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

23.

Ensure the permeable fill is well compacted, and Knockout Cover is in place over Channel prior to pouring concrete.

Luminaire must be installed so the top will be flush with desired finish surface level.

Pour concrete to desired finish depth, and finish ground surface as desired with concrete, tile, brick, marble, etc.

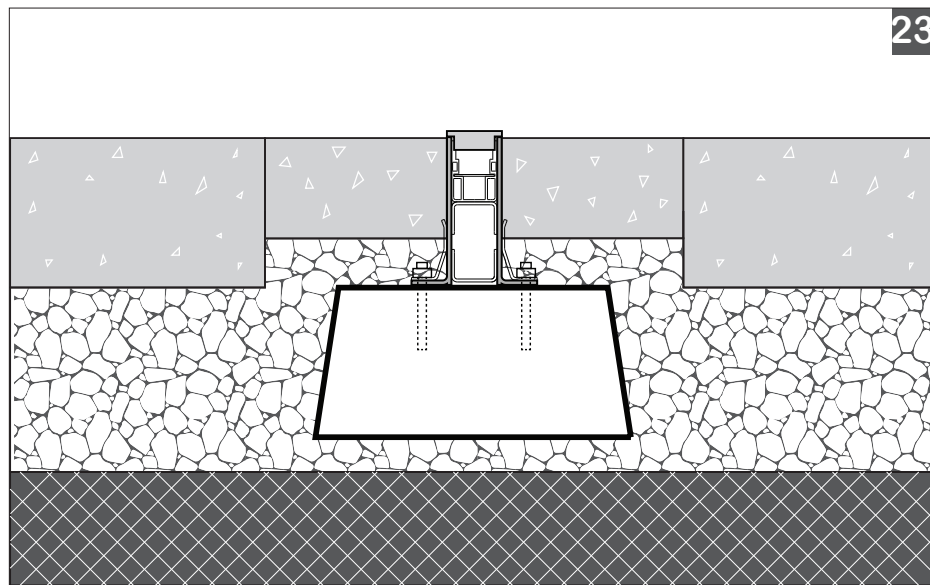



Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
 Local building and electrical codes should be consulted before installation.

**ATTENTION**



- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

**LED Installation**

24 & 25.

Carefully remove the Knockout Cover.

Ensure all parts of luminaire are clean and dry, free of moisture, dirt, debris and sand.

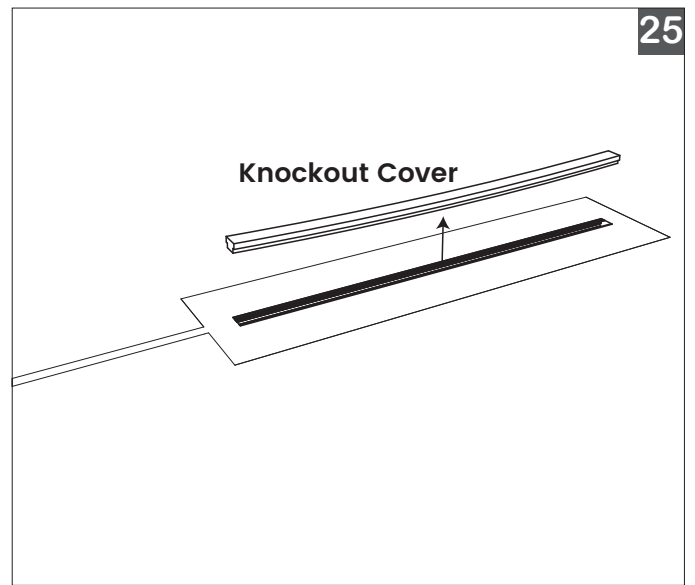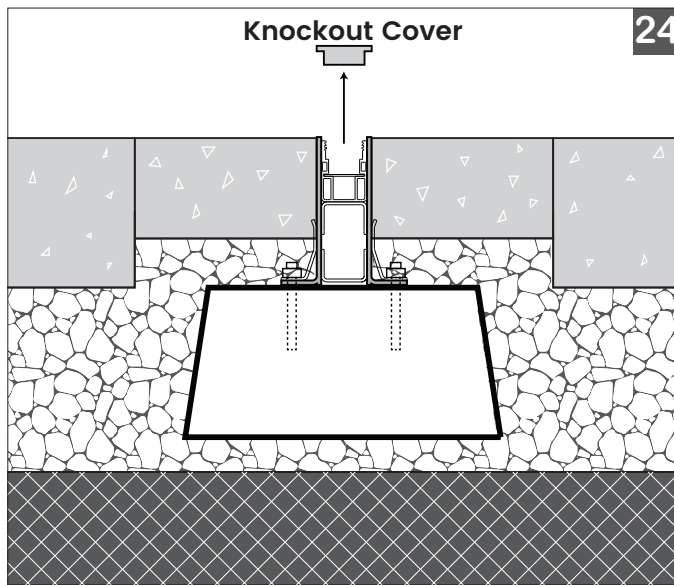




Please note that these instructions are guidelines only and in no way supersede any construction or installation standards. Local building and electrical codes should be consulted before installation.


**ATTENTION**

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

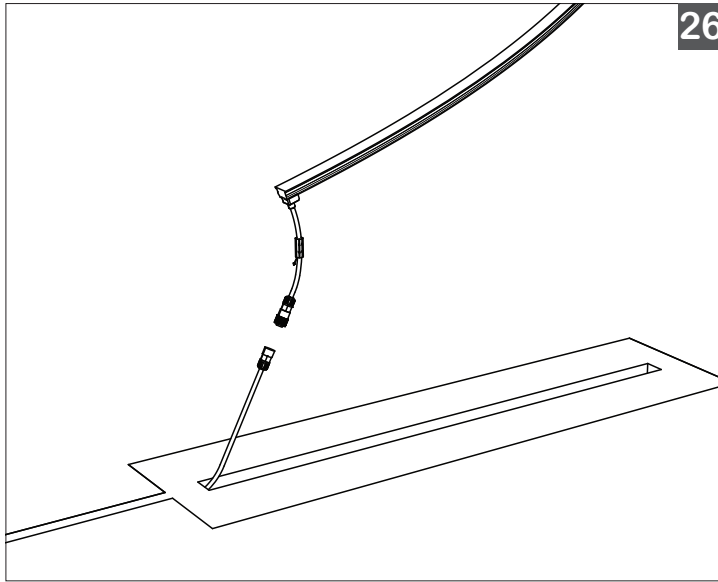

**26**

26. Carefully lay the LED into the Channel, starting from the power input end.

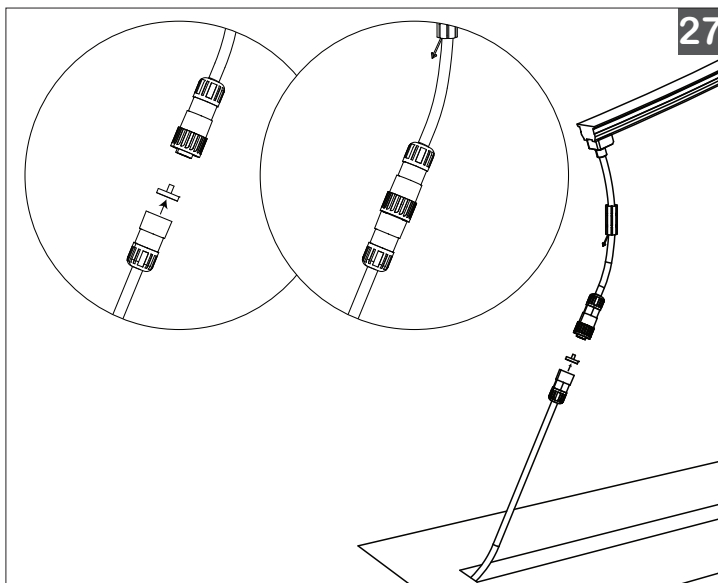

**27**

27. Verify wiring to the LED Driver, remove protective end cap, and connect to power using Quick Connects and test.







Please note that these instructions are guidelines only and in no way supersede any construction or installation standards. Local building and electrical codes should be consulted before installation.


**ATTENTION**

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

**28 & 29.**

Once LEDs have been powered up and confirmed to be operating well, tuck the cable into the channel cavity. Begin installation of the Silicone Diffuser Lens by starting from the Power Cable end, carefully pressing down by hand along the entire length, to seal the LED into place within the Channel.

Never use tools to forcibly install the LED or the Silicone Lens.

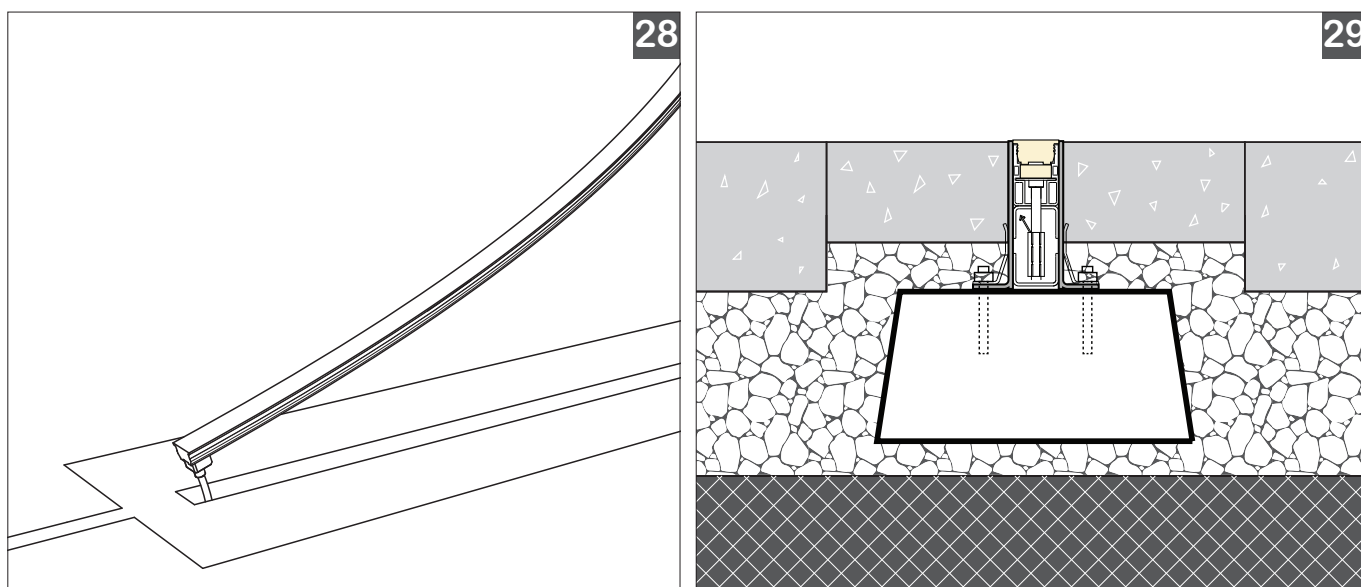



Please note that these instructions are guidelines only and in no way supersede any construction or installation standards.  
Local building and electrical codes should be consulted before installation.

**ATTENTION**

- There is potential danger of electrical shock when operating electrical components.
- Make sure power is turned off before installation.
- Allow for heat dissipation and adequate ventilation.

**Quick Notes:**

- Suitable for poured concrete, brick, pavers, tile and masonry installations.
- Must be installed on a solid footing.
- Never use tools to forcibly install the LED.
- Ensure adequate drainage to prevent luminaires from long term submersion in water.
- Failure to provide adequate drainage during installation will void warranty.
- BL inGROUND LNR3710 S2 – 2,683lbf Load Rated (Walk-Over)
- BL inGROUND LNR3710 S3 – 3,354lbf Load Rated (Drive-Over)

